

PRECAUTIONS




The accessory is **ONLY** compatible with the SI364BM hob.

- Keep children less than the age of 8 away from the appliance unless they are constantly supervised, and make sure they do not play with it.
- The accessory is not intended for use by persons who have physical, motor or mental disabilities unless they are supervised by someone who is responsible for their safety.
- Cleaning and maintenance that is intended to be carried out by the user must not be carried out by unsupervised children.
- Do not modify the accessory.
- Remove the accessory before using the hob to fry food.
- Always position the accessory correctly to prevent it from overheating.
- Do not use the accessory as a surface for cutting food. Sharp objects can easily damage it.
- Do not use abrasive sponges to clean the accessory.

EN

DESCRIPTION

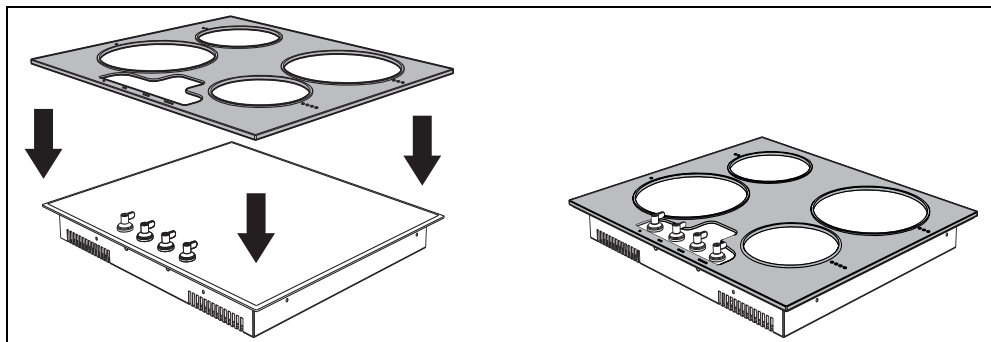

In order for the accessory to

be used correctly, you should:

- 1

Clean the hob, if necessary.
- 2

Position the accessory as shown in the figure and make sure it is seated uniformly to the hob.
- 3

Move it slightly to make sure that it is positioned properly.


USE

 See General instructions.

SYMBOL	DESCRIPTION	MAX PAN Ø (MM)
●	front left cooking zone	210
● ●	rear left cooking zone	160
● ● ●	rear right cooking zone	210
● ● ● ●	front right cooking zone	160

Correct pan position

In order for the accessory to work properly, the pans must be positioned inside the holes so that they are fully in contact with the hob.

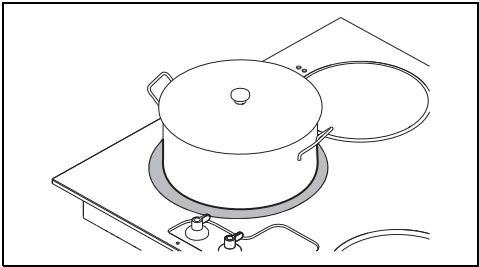

CLEANING AND MAINTENANCE

 See General instructions.

The accessory can be easily removed from the hob and cleaned in a dishwasher or with a sponge and common kitchen detergents.