

PRECAUTIONS	10	Connectivity requirements	12
General safety instructions	10	Installation of the App	12
Declaration of conformity	11	Creation of the account	12
Declaration art. 10.10 Directive 2014/53/EU	11	Product registration	12
Support Period and Vulnerability Reporting (Cybersecurity)	11	Connection to the device	12
This user manual	11	Remote connection	13
How to read the user manual	11	Change Access Point credentials	13
USE	11	Information on the connection	14
SmegConnect	11	Deletion of the registration	14
		Software updates	14
		What to do if...	15

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities. For further information on the product: www.smeg.com

Apple, App Store and iOS are trademarks of Apple Inc.
Google Play Store and Android are trademarks of Google Inc.
Wi-Fi is a trademark of Wi-Fi Alliance.

PRECAUTIONS

General safety instructions

- The use of the App requires the availability of a WLAN (Wi-Fi) network with dedicated Internet router, for the connection between appliance and mobile device.
- In case of poor signal for the use of the appliance, envisage to install a Wi-Fi repeater nearby.
- Outside the coverage range of the Wi-Fi network, the use of the App involves the availability of a data link for the mobile device.
CAUTION: additional costs might arise depending on the contract with the mobile phone operator.
- The appliance can operate off-line as a "non-connected" household appliance, but it cannot be controlled through the App when the Wi-Fi connection or the data link are deactivated.
- In compliance with the provisions regarding electromagnetic compatibility, the appliance belongs to group 2 and class B (EN 55011).
- This appliance complies with the current standards and directives regarding safety and electromagnetic compatibility. It is however recommended for pacemaker wearers to maintain a minimum distance of 20-30 cm between the appliance when it is operating and the pacemaker. Consult the pacemaker manufacturer

for more information.

- In some models only, for safety reasons and in compliance with current legislation, some functions cannot be activated remotely.

Declaration of conformity

The manufacturer, SMEG, declares that the types of radio equipment:

CVI118RWS2 - CVI118LWS2
 CVI118RWN2 - CVI118LWN2
 CVI318RWX2 - CVI318LWX2
 CVI618RWN2 - CVI618LWN2
 CVI618RWNX2 - CVI618LWNX2
 CVI638RWN2 - CVI638LWN2
 CVI338RWX2 - CVI338LWX2
 CVI138RWS2 - CVI138LWS2
 CVI621LWNR3 - CVI621RWNR3
 CVI621LWNX3 - CVI621RWNX3
 CVI638LWN3 - CVI638RWN3

comply with the directive 2014/53/EU.

- Technology: Wi-Fi IEEE 802.11 b/g/n.
- Frequencies: 2400-2497 MHz.
- Max. output power: +18.5 dBm.
- The equipment operates in the ISM band at 2.4 GHz.

The complete text of the EU declaration of conformity is available at the following internet address:

www.smeg.com/smegconnect/direttiva_red

Declaration art. 10.10 Directive 2014/53/EU

This radio equipment is NOT subject to restrictions on putting into service or to requirements concerning authorisation for use in any of the EU Member States.

Support Period and Vulnerability Reporting (Cybersecurity)

The manufacturer declares that the product has a defined support period. The defined support period represents the minimum period during which security software

updates are provided for each product. The expiry of the support period for a given product does not compromise its operation: the product generally remains updatable; however, we cannot guarantee updates for any security vulnerabilities that may be identified. Vulnerabilities can be reported via a dedicated form available on our websites; before submitting a report, please read the vulnerability disclosure policy.

Please note that this statement applies exclusively to products sold in the following countries. Information relating to the support period and vulnerability reporting is provided at the following links:

- United Kingdom (UK PSTI Act):
www.smeguk.com/cybersecurity
- Australia (AU Cybersecurity Act):
www.smeg.com/au/cybersecurity

At the links above, it is also possible to download the Statements of Compliance for each connected product by entering the relevant Serial Number - S/N.

This user manual

- This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.
- Read this user manual carefully before using the appliance.
- The explanations in this manual include images, which describe all that regularly appears on the display. However, it should be kept in mind that the appliance may be equipped with an updated version of the system, and as such, all that appears on the display may differ from those in the manual.

How to read the user manual

This user manual uses the following reading conventions:



Warning/Caution



Information/Advice

USE

SmegConnect

The appliance is equipped with SmegConnect technology that allows the

user to control the appliance operation via an App on his/her smartphone or tablet. For further information, refer to the supplied

brochure and/or visit the site
www.smeg.com

Connectivity requirements

- Smartphone or PC tablet with iOS or Android operating system. The minimum versions of the operating systems are available at the following link:
www.smeg.com/smegconnect/
- Wi-Fi network (2.4 GHz band, WPA2 protected) active and available in the place where the appliance is installed.
- Internet connection.
- Name and password of the home Wi-Fi.

Installation of the App

Download the App SmegConnect on your mobile smartphone or tablet from App Store (Apple devices) or Google Play Store (Android devices) and install it.

Creation of the account




1. Launch the SmegConnect App.
2. Enter the information required in order to register.



The fields marked with an asterisk "*" are mandatory.

3. A confirmation e-mail is sent to the address that has been entered when the registration procedure has been completed.

Product registration

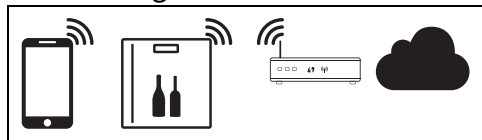

The registration step is formed by alternated operations to be made in the App **A** and on the control panel of the appliance **D**. Make sure you are close to

the appliance.



If Connection Failed **CF** is displayed during registration, it means that some passages of the procedure did not work properly or were interrupted.

To remove **CF** press the Alarm



key (wine cellars with single compartment) or the display for upper compartment display



(wine cellars with double compartment).



The procedure can be interrupted at any time by pressing the

Connection  key.

Connection to the device



1. Tap **Log in**.
2. In the following screen (Home page), tap **Add product**.
3. Select the type of product you wish to connect (in this case "wine cellar").



4. Press any key on the device to activate the control panel.
5. Hold down the **Connection**  key for a few seconds. The device enters the **SmegConnect** menu; the display shows **SC**.
6. Press and hold the **light forced**  key within 30 seconds until it starts flashing.



7. Select **Manual mode**.
8. Go to the Wi-Fi settings on the mobile device and select the "smegconnect" network.
9. Enter the password "smeg0001" and wait for the connection to be established.
10. Go back to the **SmegConnect** App and tap **Next**.



11. Press the **Fan**  key on the appliance within one minute, to confirm your presence. The **Connection**  key starts flashing.

A

12. Enter the Access Point data:

- Name of the home Wi-Fi network.
- Wi-Fi password.



The device supports network names (SSID) up to 24 digits (including spaces) and WPA2 security settings (not WEP or WPA).

13. Tap **Next** and wait for the confirmation page.



During this step, the mobile device automatically reconnects to the initial Wi-Fi network or data network. No user operation is required.


D

14. Wait for the confirmation acoustic signal.

The product registration procedure is completed.

The device is connected to the Internet and can be remotely controlled.

Remote connection

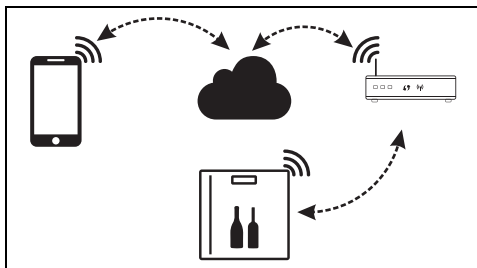

Once the device is registered, it can be connected or disconnected from the Internet at any time.



The remote connection is only available if the device has been registered.

To disconnect the device:

1. At any time, press the **Connection**  key.
2. The **Connection**  key stops flashing and becomes solid again.

To connect the device again:

1. At any time, press the **Connection**  key.

2. The **Connection**  key starts flashing. For a few seconds the display will show  alternately with the value of the temperature, until the Internet connection is completed.

Change Access Point credentials



The procedure can be interrupted at any time by pressing the **Connection**  key.

To change your Access Point credentials (**network name** or **password**):

A

1. Log in the App, tapping **Log in**.
2. In the **Settings** menu of the product pages select **Change Access Point**.

D

3. Press any key on the device to activate the control panel.
4. Hold down the **Connection**  key for a few seconds. The device enters the **SmegConnect** menu; the display shows .
5. Press and hold the **ON/OFF**  key within 30 seconds until it starts flashing.



On some models only, the **ON/OFF** key is lit only if the product has already been registered.

A

6. Select **Manual mode**.
7. Go to the Wi-Fi settings on the mobile device and select the "smegconnect" network.
8. Enter the password "smeg0001" and wait for the connection to be established.
9. Go back to the **SmegConnect** App and tap **Next**.

D

10. Press the **Fan**  key on the appliance within one minute, to confirm your presence. The **Connection**  key starts flashing.

A

11. Enter the Access Point data:
 - Name of the home Wi-Fi network.

- Wi-Fi password.



The device supports network names (SSID) up to 24 digits (including spaces) and WPA2 security settings (not WEP or WPA).

12. Tap **Next** and wait for the confirmation page.



During this step, the mobile device automatically reconnects to the initial Wi-Fi network or data network. No user operation is required.

D

13. Wait for the confirmation acoustic signal.

The Access Point credentials change procedure is completed.

The device is connected to the Internet and can be remotely controlled.



If **Connection Failed** **CF** is displayed during registration, it means that some passages of the procedure did not work properly or were interrupted.

To remove **CF** press the Alarm  key (wine cellars with single compartment) or the display for upper compartment display

 **12** (wine cellars with double compartment).

Information on the connection

A

Within the App, in the **Settings** menu of the product pages you will find information about the connection, such as:

- device registration date;
- name of the network;
- level of Wi-Fi signal;
- MAC address of the Connectivity board;
- Firmware version of the Connectivity board;
- IPv4 and IPv6 network addresses;
- SW Compliance ID (identification of compliance with the essential requirements of the RED directive).

Deletion of the registration

To delete the registration of the device from the App:

A

- Go to the **Settings** menu on the App and follow the instructions.



The product can be registered again following the procedure described above.

To delete the registration of the device on the product (on some models only):

D

1. Press any key on the device to activate the control panel.
2. Hold down the Connection  key for a few seconds. The device enters the SmegConnect menu; the display shows **SC**.
3. Within 30 seconds press simultaneously the keys **+** and **-** for a few seconds until they start flashing.
4. Wait for the confirmation acoustic signal.



This procedure only deletes the registration and restores the factory settings for the **SmegConnect** menu.



The deletion on the device does not need the cloud connection.



This type of deletion only affects the product, please delete the device also from the App.



The product can be registered again following the procedure described above.

To delete the registration of the user:

A

- Go to the **My account** menu on the App and follow the instructions of the Privacy Policy.

Software updates



This stage does not require any activity of the user.

Software updates are occasionally released

concerning the device connectivity.
If the device is connected to the home Wi-Fi network, the updates are automatically downloaded and installed.

The display shows **UP** (on some models only), or **EN** alternated with the temperature value, or **SE**.



During these stages, the connectivity service is temporarily interrupted. Updating lasts some minutes.
However, you cannot change the status of the Connection key or access the SmegConnect menu and procedures.



During software updates, the devices operates as usual.

connection, if the mobile device uses the latter for Internet.

- Retry later on.
- Disconnect the device from the socket and switch it on again after having ascertained that it switched off.

The display shows **EE**: **device fault**:

- Contact technical support.

The App shows **EF**: **device fault**:

- Contact technical support.

For further information see:

- the section Recommendations / FAQ / Connectivity on the App.
- the web page www.smeg.it/faq/smegconnect/

What to do if...

Once the product is registered, the display shows **EN** alternating with the temperature value. If this condition continues for more than one minute, there might be problems in the remote connection:

- Check if the Wi-Fi router is switched on.
- Ensure that the Wi-Fi router is not too far.
- Check the conditions of the Wi-Fi network (2.4 GHz band).
- Check the conditions of the Internet connection.
- Press the **Connection**  key to disconnect the device and retry the connection later on.
- Disconnect the device from the socket and switch it on again after having ascertained that it switched off.

Product registration or Access Point change procedures fail:

- Check if the Wi-Fi router is switched on.
- Ensure that the Wi-Fi router is not too far.
- Check the conditions of the Wi-Fi network (2.4 GHz band).
- Check the availability of the WPA2 data protection mode.
- Ensure that the name of the network is shorter than 24 digits (including spaces).
- Check the conditions of the Internet connection.
- Check the conditions of the data